


**STANDARD DEPARTURE CHART
INSTRUMENT (SID) - ICAO**

**TRANSITION
ALTITUDE
10 000 FT
VAR 5° E (2020)**

**APP 120.350
TWR 132.925
ATIS 133.825**

**TUZLA (LQZT)
RWY 09**

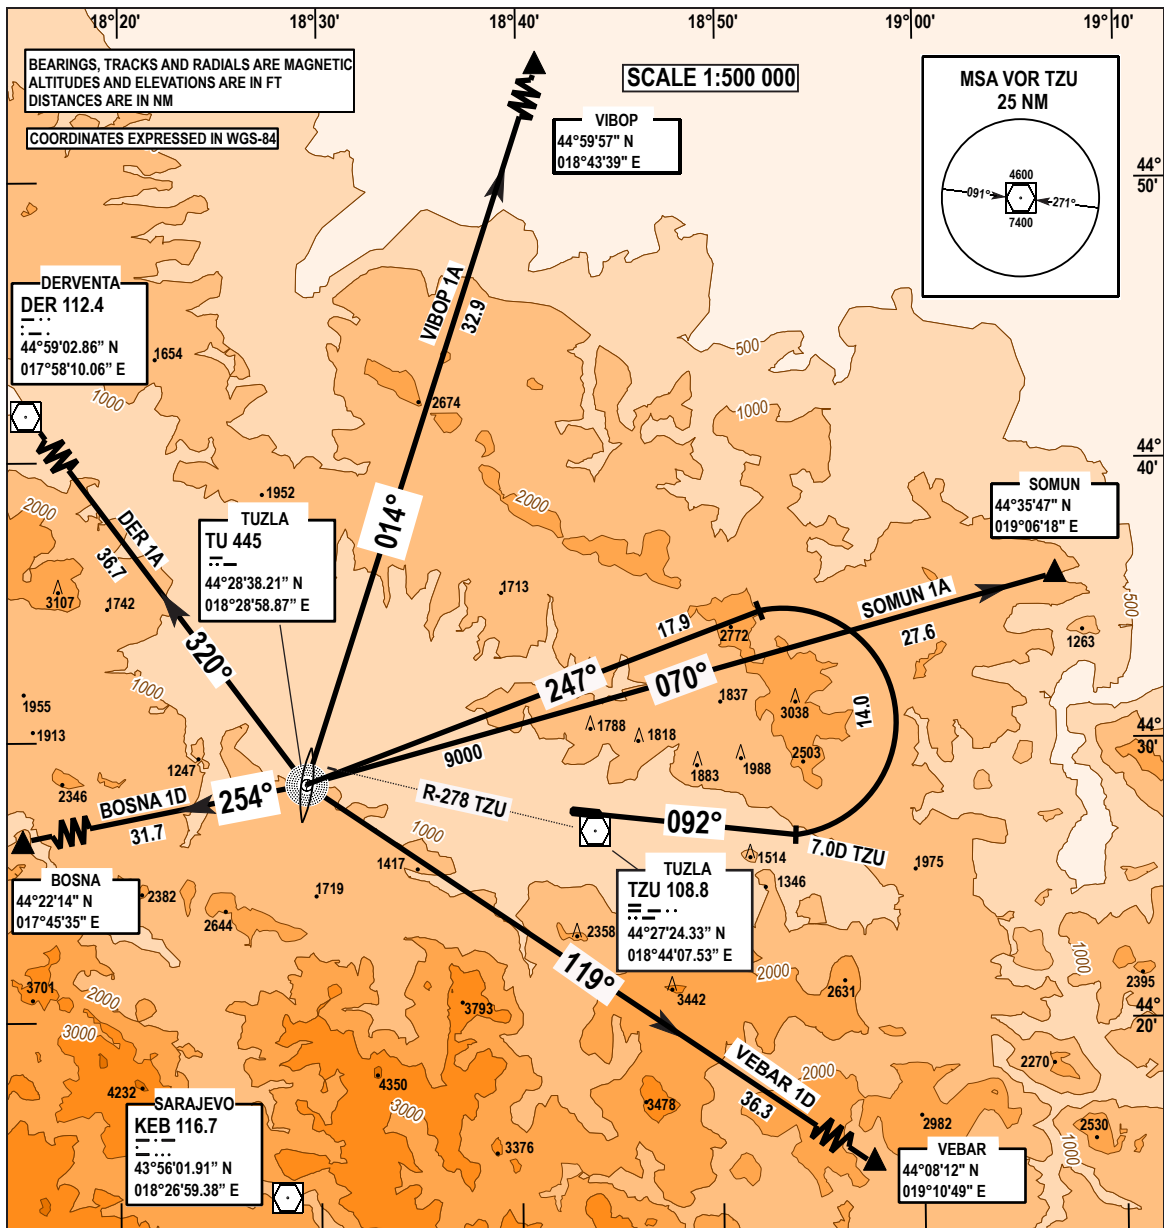

CHG: ATIS added

BOSNA 1D DEPARTURE - RWY09
Climb straight ahead. At 7.0D TZU turn left, intercept and follow TU QDM 247° to TU NDB, next BOSNA POINT.
Cross 7.0D TZU at or above 3100 ft and R-278 TZU at or above 9000 ft.
This procedure requires PDG of 5.4% until 3300 ft.

DER 1A DEPARTURE - RWY09
Climb straight ahead. At 7.0D TZU turn left, intercept and follow TU QDM 247° to TU NDB, next DER VORDME.
Cross 7.0D TZU at or above 3100 ft and R-278 TZU at or above 9000 ft.
This procedure requires PDG of 5.4% until 3300 ft.

VIBOP 1A DEPARTURE - RWY09
Climb straight ahead. At 7.0D TZU turn left, intercept and follow TU QDM 247° to TU NDB, next VIBOP POINT.
Cross 7.0D TZU at or above 3100 ft and R-278 TZU at or above 9000 ft.
This procedure requires PDG of 5.4% until 3300 ft.

SOMUN 1A DEPARTURE - RWY09
Climb straight ahead. At 7.0D TZU turn left, intercept and follow TU QDM 247° to TU NDB, next SOMUN POINT.
Cross 7.0D TZU at or above 3100 ft and R-278 TZU at or above 9000 ft.
This procedure requires PDG of 5.4% until 3300 ft.

VEBAR 1D DEPARTURE - RWY09
Climb straight ahead. At 7.0D TZU turn left, intercept and follow TU QDM 247° to TU NDB, next VEBAR POINT.
Cross 7.0D TZU at or above 3100 ft and R-278 TZU at or above 9000 ft.
This procedure requires PDG of 5.4% until 3300 ft.

THIS PAGE INTENTIONALLY LEFT BLANK